
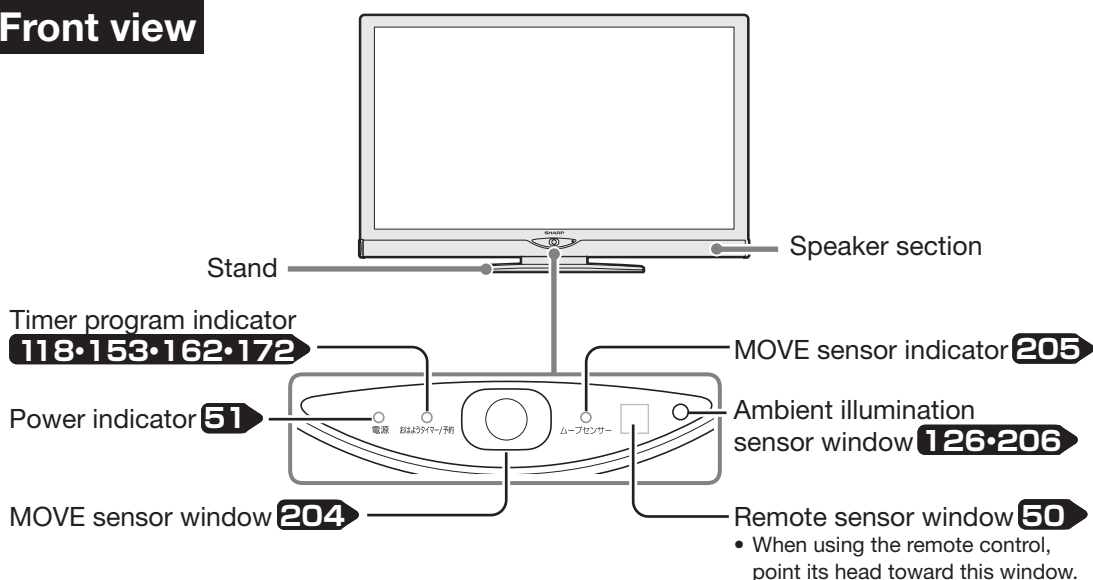


# English Guide

## Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


### Front view




### Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

### Right Side view

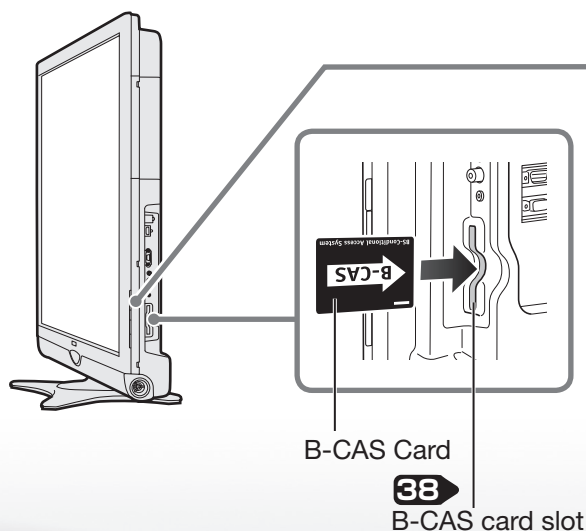


### Control panel

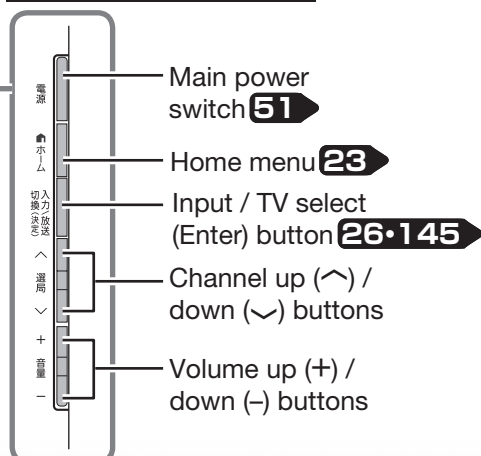

## Back view

The illustrations below are those of LC-52SE1.  
LC-46SE1/LC-40SE1 has the same layout of jacks and terminals as.

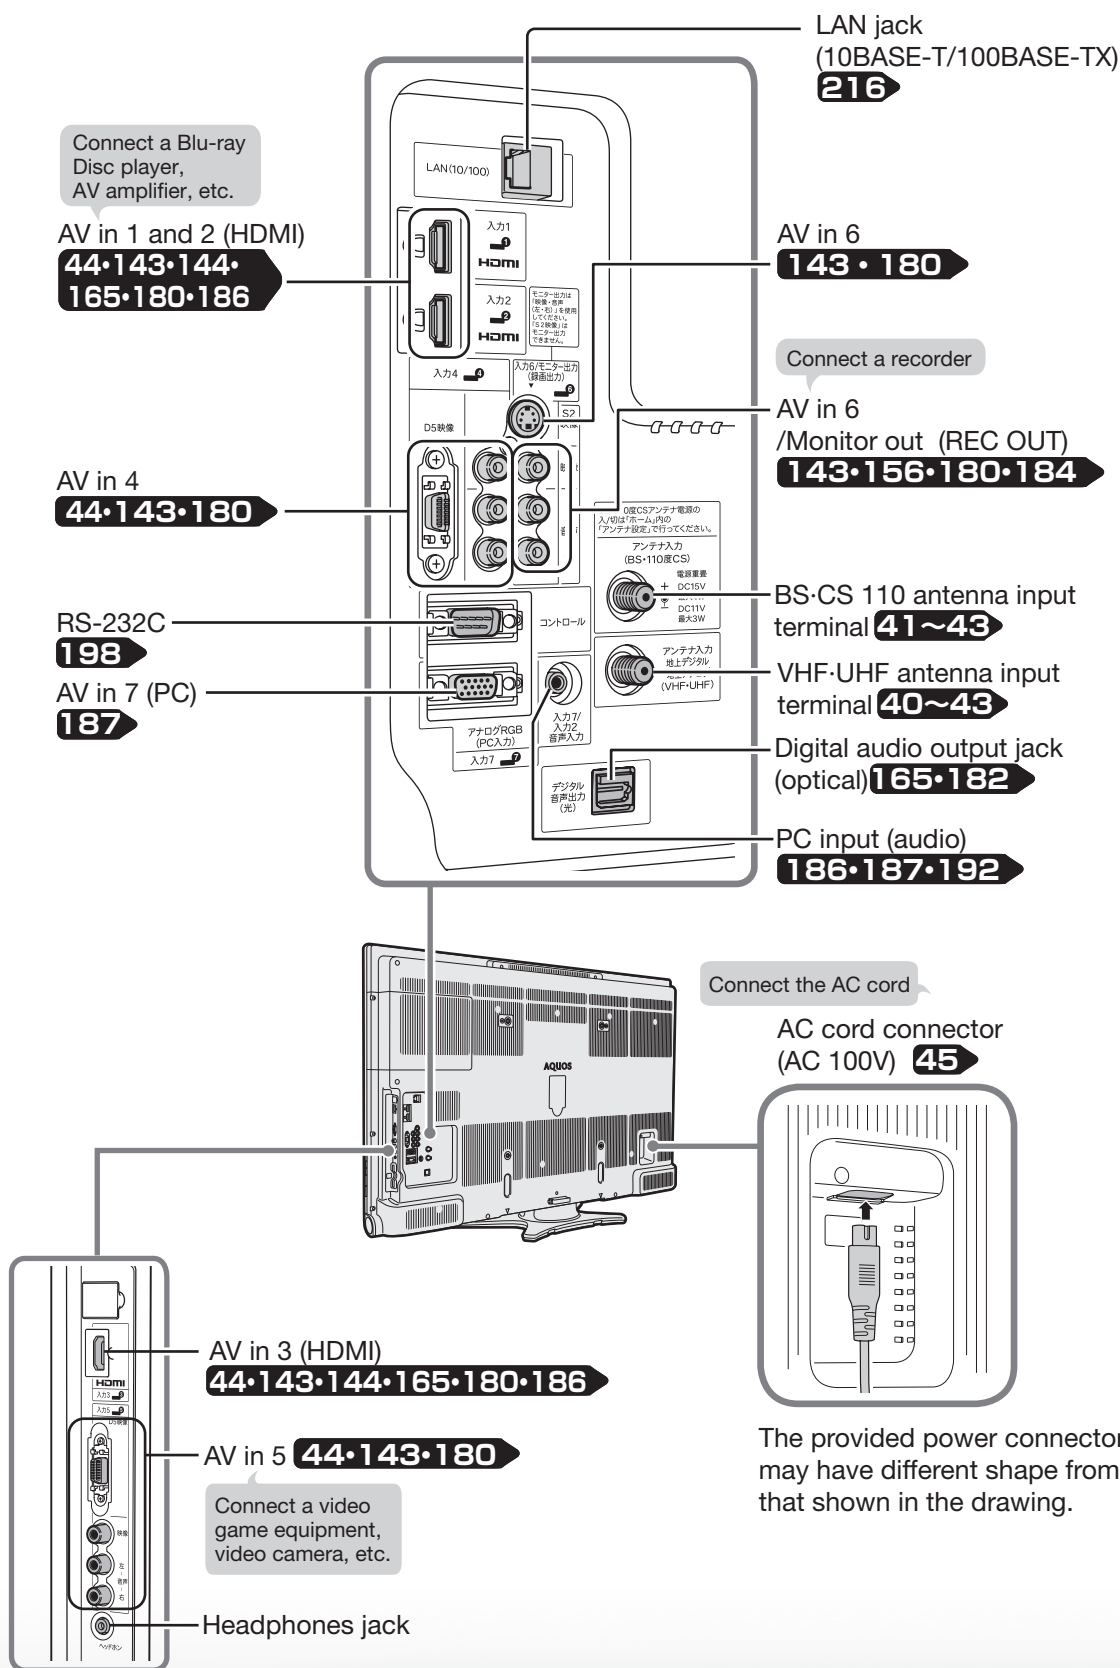

はじめに

準備

番組を見る

録画と再生

ファミリンク  
で録画・再生

ゲームオーディオ  
パソコンをつなぐ

本機をさらに  
活用する

インターネット  
を楽しむ

インターネット  
で番組を楽しむ

写真の表示・  
音楽の再生

故障かなど  
寸法図など

English  
Guide

# Remote Control Unit

## Active/Standby **51**

Press to engage the TV set in the active or standby mode.

## SAVE mode **207**

Press to change to the SAVE mode.

## Digital channel number input **86**

Use to select a digital channel by entering the 3-digit channel number.

## CATV **87**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10).

## Mute **83**

Press to mute audio.

## Volume up (+)/down (-) **83**

Press to adjust the volume.

## Linked data broadcast **113**

Press to call the data broadcast linked with the current digital TV program.

## AV mode select **124**

Press to select the picture/sound setting that best matches the current program.

## Sleep timer **209**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

## Familink **178**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## 番組表 EPG **90**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## ホーム Display the "Home" Menu **26**

Press to start some useful operations of the TV.

## 番組情報 Program info **114**

Press to display detailed information on the current digital program.

## Finish **26**

Press to finish menu operation, etc.

## Screen mode **121・188**

Press to select the desired screen mode.

## Freeze **113**

Press to freeze the picture.

## Familink **170・173~177**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## Recommended programs select **94・95**

Press to select a program which the TV set recommends.

## Display **84**

Press to display or turn off the channel call, etc.

## Internet **222・242**

Press to connect to the internet.

## VOD **251・256**

Press to display the VOD control panel.

## Channel select **83**

- Press to select a channel.
- Use to input a number for various settings.

## 地上D Terrestrial digital select **82**

## BS BS select **82**

## CS CS select **82**

## 地上A Terrestrial analog select **82**

When selecting the CS digital channel for the first time. **57**

## Channel up (^)/down (v) **83**

Press to select channels in the ascending or descending order.  
\*CATV channels are factory set to be skipped. **75**

## Input select **145**

Press to select the input.

## Display the Tool Menu

## Cursor (up, down, left, right) **26**

Use to select a menu item, column, etc.

## 決定 Enter/Confirm **26**

Press to confirm a selected setting or menu item.

## Return **26**

Press to go back to the previous screen.

## 青 赤 緑 黄 Color **92・93**

Use to operate EPGs and data program screens.

## 映像切換 Picture select **105**

Press to select the desired picture when watching a digital multi-picture program.

## 字幕 Caption **105~107**

Press to display, select, or turn off captions when watching a digital program with captions.

## 音声切換 Audio select **104・105**

Press to select the audio.

## テレビデータ Media select **82**

Press to select the media (TV or data).

## Split screen **108**

Press to switch between the split screen mode and the normal screen mode.

## 操作切換 Operable screen **109**

Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover


Hold the cover by the projections on both sides and lift upwards.



# Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

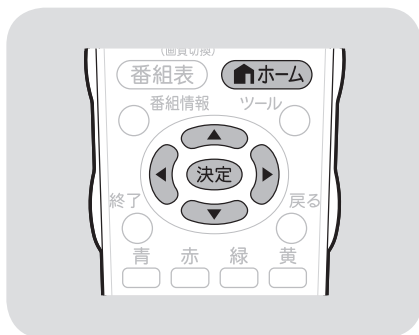


誤ってホームメニューを英語にしてしまったときは

- ・ ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

## 1

Press  
 ホーム  
and  
select with


Select “設定” (Setup) on the Home menu.  
ホームメニューから「設定」を選ぶ

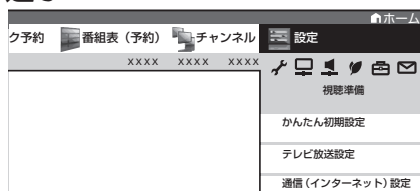

## 2

Select with


Select “ (視聴準備)” (View Setting).  
 (視聴準備) を選ぶ

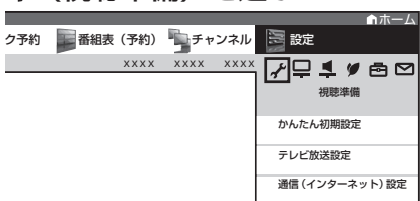

## 3

Select with  
  
Press

Select “Language (言語)”.  
「Language (言語)」を選ぶ

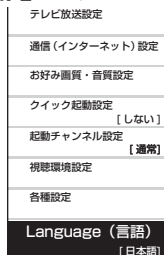

## 4

Select with  
  
Press

Select “English”.  
「English」を選ぶ  
Enter.  
決定する



- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

## 5

Press

Finish this operation.  
終了する

はじめに

準備

番組を見る

録画と再生

ファミリーリンク  
で録画・再生

ゲームボーイアドバンス  
を遊ぶ

本機をさらに  
活用する

インターネット  
を楽しむ

インターネット  
で番組を楽しむ

写真の表示・  
音楽の再生

故障かなど  
トラブル

English  
Guide